
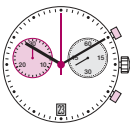


Cal. 5030.D

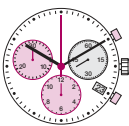

Cal. 5021.D

RONDA is a supplier of watch movements including their operating instructions. Please refer to the watch retailer, service centre or manufacturer, should you have any questions regarding the watch. All relevant contact information can be found in your sales and/or guarantee documents.

## English User's Manual

Battery type: 395 (diameter 9.5mm x 2.6mm / SR 927 SW)  
Accuracy: +20 / -10 seconds per month




### Description of the display and control buttons

#### Display elements


Second hand  
Minute hand  
Hour hand  
Centre stop-second  
Minute counter  
Hour counter  
Date

#### Control buttons

Push button A  
Crown  
Push button B

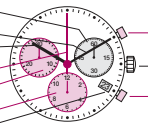

### Minute counter Push-button A

 

### Hour counter



### Chronograph: Basic function

(Start / Stop / Reset)


Example:

- Start:** Press push-button A.
- Stop:** to stop the timing, press push-button A once more and read the three chronograph hands: **1h / 20min / 10 sec.**
- Zero positioning:** Press push-button B. (The three chronograph hands will be reset to their zero positions).

### Minute counter Push-button A



### Hour counter

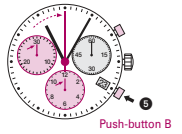

### Chronograph: Accumulated timing


Example:

- Start:** (start timing)
- Stop:** (e.g. 15 min 5 sec following 1)
- Restart:** (timing is resumed)
- Stop:** (e.g. 13 min 5 sec following 3)  
= **28 min 10 sec**  
(The accumulated measured time is shown)


- Reset:** The three chronograph hands are returned to their zero positions.

**Please note:**  
\* Following 2, the accumulation of the timing can be continued by pressing push-button A (Restart / Stop, Restart / Stop, ...)

### Minute counter Push-button A

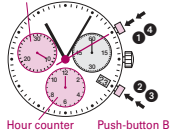

### Hour counter

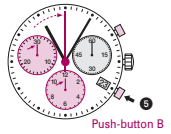


### Chronograph: Intermediate or interval timing

Example:


- Start:** (start timing)
- Display interval:** e.g. 10 minutes 10 seconds (timing continues in the background)
- Making up the measured time:** (the 3 chronograph hands are quickly advanced to the ongoing measured time).
- Stop:** (Final time is displayed)
- Reset:** The 3 chronograph hands are returned to their zero position

**Please note:**  
\* Following 2, further intervals or intermediates can be displayed by pressing push-button B (display interval / make up measured time, ...)

### Minute counter Center stop-second

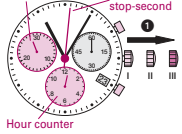


### Hour counter

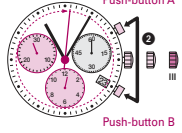

### Adjusting the chronograph hands to zero position

Example:  
One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- Pull out the crown to position III (all 3 chronograph hands are in their correct or incorrect zero position).
- Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the centre stop-second rotates by 360° → corrective mode is activated).

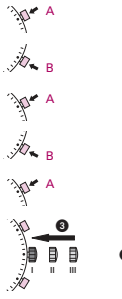

### Adjusting the centre stop second

Single step  A 1 x short  
Continuous  A long

### Adjusting the next hand B

### Adjusting the hour counter hand (position 6h)

Single step  A 1 x short  
Continuous  A long


### Adjusting the next hand B

### Adjusting the minute counter hand (position 9h)

Single step  A 1 x short  
Continuous  A long

- Returning the crown to position I  
Termination of the chronograph hands adjustment (can be carried out at any time).

### Second hand


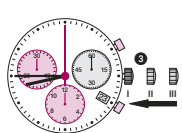


### Setting the time

- Pull out the crown to position III (the watch stops).
- Turn the crown until you reach the correct time 8:45.
- Push the crown back into position I.

**Please note:**  
\* In order to set the time to the exact second, 1 must be pulled out when the second hand is in position «50» (I).  
Once the hour and minute hands have been set, 2 must be pushed back into position I at the exact second.


 
### Setting the date (quick mode)

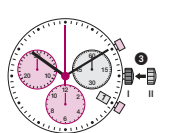

- Pull out the crown to position II (the watch continues to run).
- Turn the crown until the correct date 11 appears.
- Push the crown back into position I.

**Please note:**  
During the date changing phase between 9 PM and 12 PM; the date must be set to the date of the following day.

### Setting the date/time following a battery change

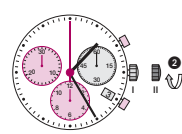
 


### Setting the date/time following a battery change

Example:  
- Date / time on the watch: 17 / 1:25 AM  
- Present date / time: 4 / 8:30 PM

- Pull out the crown to position II (the watch continues to run).
- Turn the crown until yesterday's date appears 3.
 
### Second hand

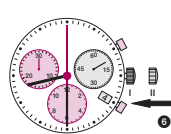

- Pull out the crown to position III (the watch stops).
- Turn the crown until the correct date 4 appears.
- Continue to turn the crown until the correct time 8:30 PM appears.
- Push the crown back into position I.

**Please note:**  
\* To set your watch to the exact second, please refer to the chapter entitled «setting the time».  
\*\* Please observe the AM/PM clock rhythm.