



www.wolfperformance.co.uk
cain@wolfperformance.co.uk
00 44 (0)7944 720 706

AERO SUMP RUB PLATE

Fitting Guide





The kit includes;

1 No. Sump Plate

8 No. replacement bolts & spring washer sets

4 No. Flanged nuts & Countersunk bolts


4 Mounting blocks




*Picture shows the method of fixing the mounting blocks to the plate,
with the chamfered edge on the front edge of the plate*



Picture shows the mounting block locations

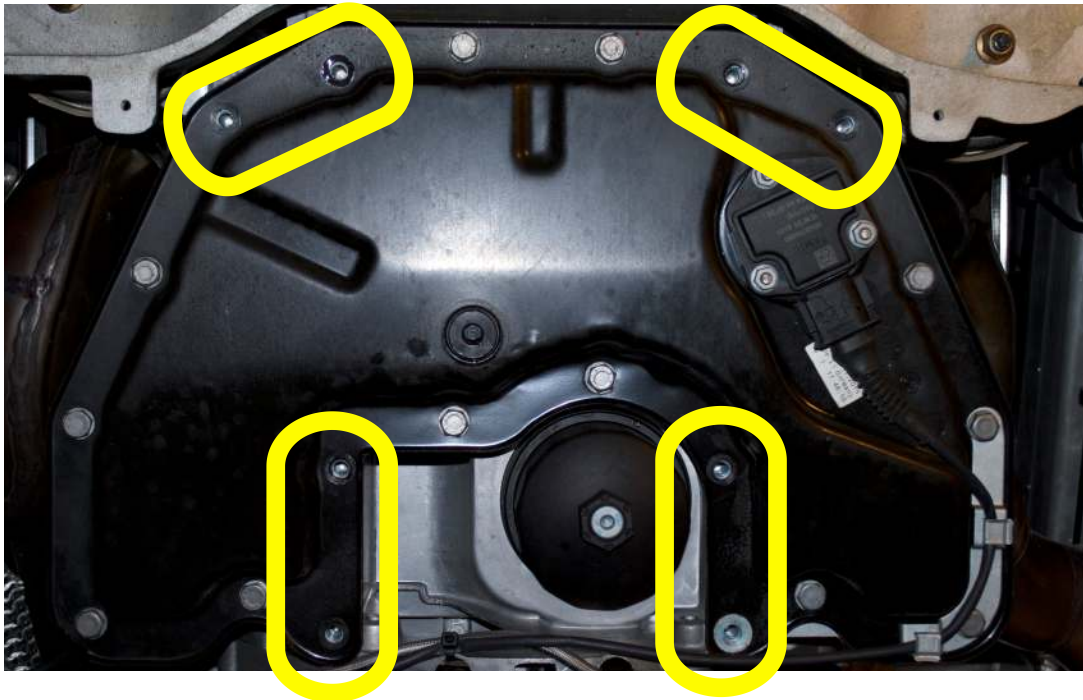

1. Remove the 8 No. Sump bolts from the highlighted areas

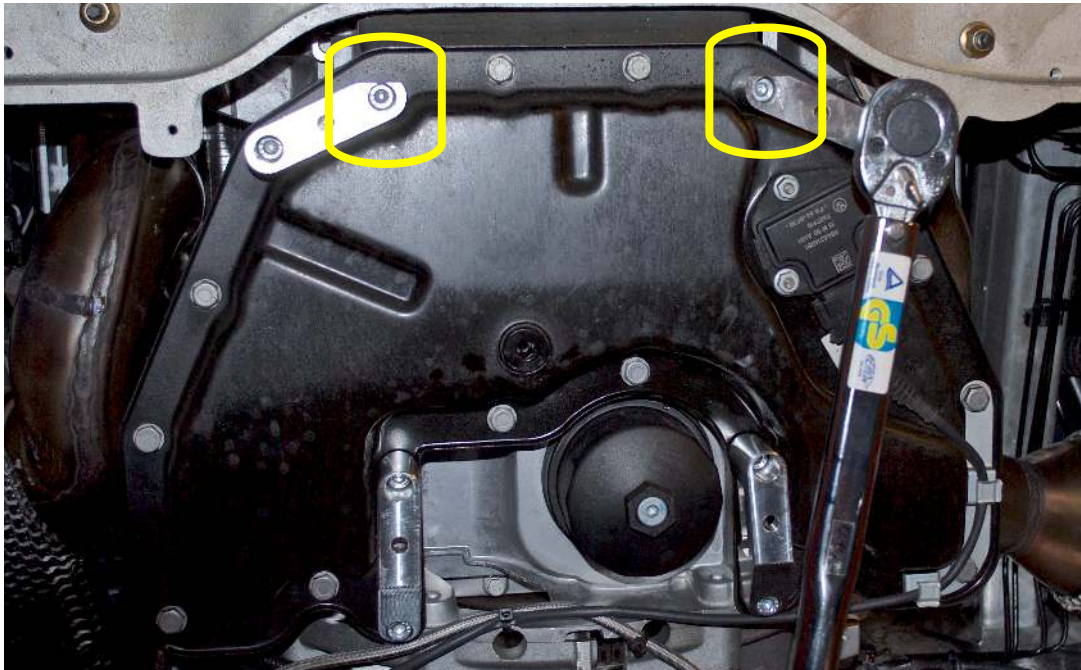

3. Using the replacement bolt's and spring washers, install the mounting blocks

Re-torque the bolts to the BMW Torque setting, this is normally around 24 Nm, but you need to confirm this with BMW

Note, the chamfered section face the front centre of the car



4. Fix the rub plate to the mounting blocks using the Countersunk bolts and Flanged nuts.