


Bottom bonnet catch offside (U.K.) position

Bonnet prop

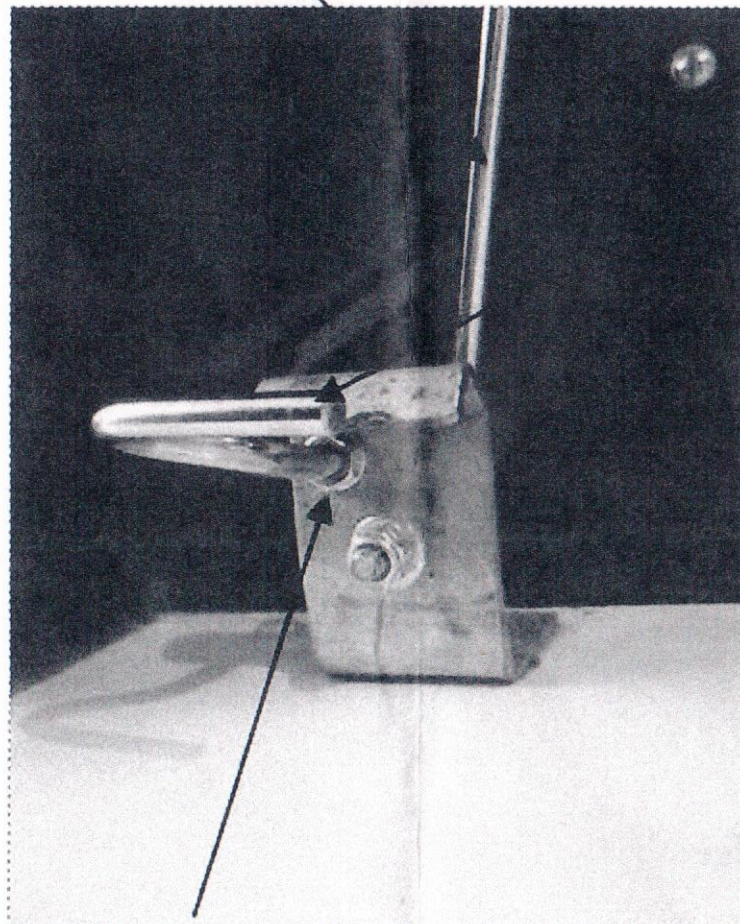

Fitting guide



Extension bracket pointing towards front of Morgan

Position bracket into hole and secure (note bracket is 'cranked upwards') as in picture with the open end pointing towards front of the car.

Locate top Bonnet catch slide onto extension bracket to allow approx. 50mm gap. Can be removed during cooler weather.

6mm dia

7mm edge to center

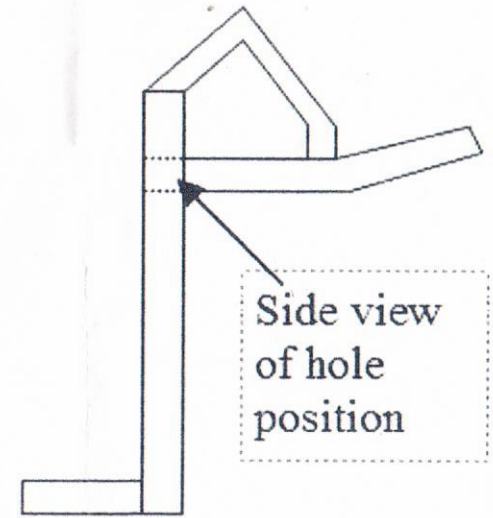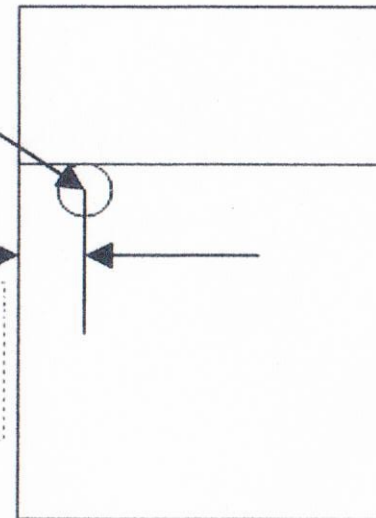

Drill 6mm dia hole.....7mm from edge of bottom bonnet catch and level with underside of lip.

Schematic layout